

LARA P



CZ - krátkým dotekem zapnout / vypnout, podržte pro změnu jasu

SK - krátkym dotykom zapnúť / vypnúť, podržte pre zmenu jasu

RO - atingere scurtă pentru a porni / opri, atingere lungă pentru întunecare

EN - short touch to turn on / off, long touch for dimming

